Tentipi '



Mounting Olivin's rain roof



The rain roof is attached to the accessory sleeve which is now a standard feature of all Olivin tents. For the older version with no sleeve (serial number lower than 52903), an accessory connector can be bought. The roof can be mounted in different ways and two procedures are described below.



One or two telescopic hiking sticks are required when mounting the rain roof (not included). You can also use branches or the like (115-135 cm



There are eyelets on the front edge of the rain roof. If using one stick (see picture A below), the middle eyelet is attached to the stick. If using two sticks (see picture B below), use the two corner eyelets.



No matter if one or two sticks are used, the four cords at the corner eyelets are pegged to the ground. Adjust so there is no gap between the rain roof and the tent.



The rain roof mounted using one hiking stick plus two cords and tightened using another two cords.



The rain roof mounted using two hiking sticks plus two cords and tightened using another two cords.

The rain roof is not intended to resist strong winds and snow. The exceptional storm resistance of a Tentipi® Adventure Nordic tipi is maintained by the rain roof being designed so that it can easily be removed in bad weather. Before using the product, please read "Care instructions, hints and advice" at tentipi.com/support

