


# Wooden pole set for Adventure Nordic tipis

Tentipi   
embrace the elements

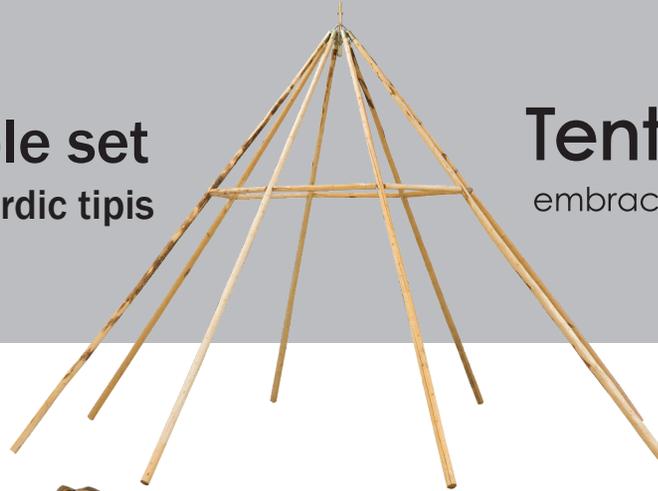

1. Lay out the eight main poles on the ground and attach them to the top joint. The wing screws must face downwards.

2. For a more comfortable working height, you can place the top joint on a cross-pole.



3. Rotate the main poles so that the drilled hole is horizontal.



4. Tighten the screw firmly. Twist the wings so they are parallel to the pole.



5. Spread the tent fabric out over the set of poles. The cap at the top of the tent is placed on the centre pole.



7. Attach the cross-poles by pushing a cross-pole wire through the main pole and then place the cross-poles on the wire.



8. Nail a peg in the ground strap 15–20 cm from the end of the main pole.



10. Attach the regulating tube to the tent wall and make sure the cords run freely at the top of the Nordic tipi.



6. Lift the Nordic tipi straight up so that it almost takes on its final shape but don't lift it too high because that will make it difficult to fit in the cross-poles.



9. Tension the ground straps so the Nordic tipi becomes taut and smart.



11. To dismantle the Nordic tipi, start by taking away all the cross-poles. Then push the main poles towards each other and gather the poles and tent fabric together into a bundle. Carefully put the bundle on the ground. Unscrew the main poles.

Before using the product, please read "Care instructions, hints and advice"

Before using the product, please read "Care instructions, hints and advice" at [tentipi.com/support](https://tentipi.com/support)